




# Garmin Nuvi 42LM Speaker Replacement

This guide will instruct you on how to replace your speaker on the Garmin Nuvi 42LM.

Written By: Elina Zhukov

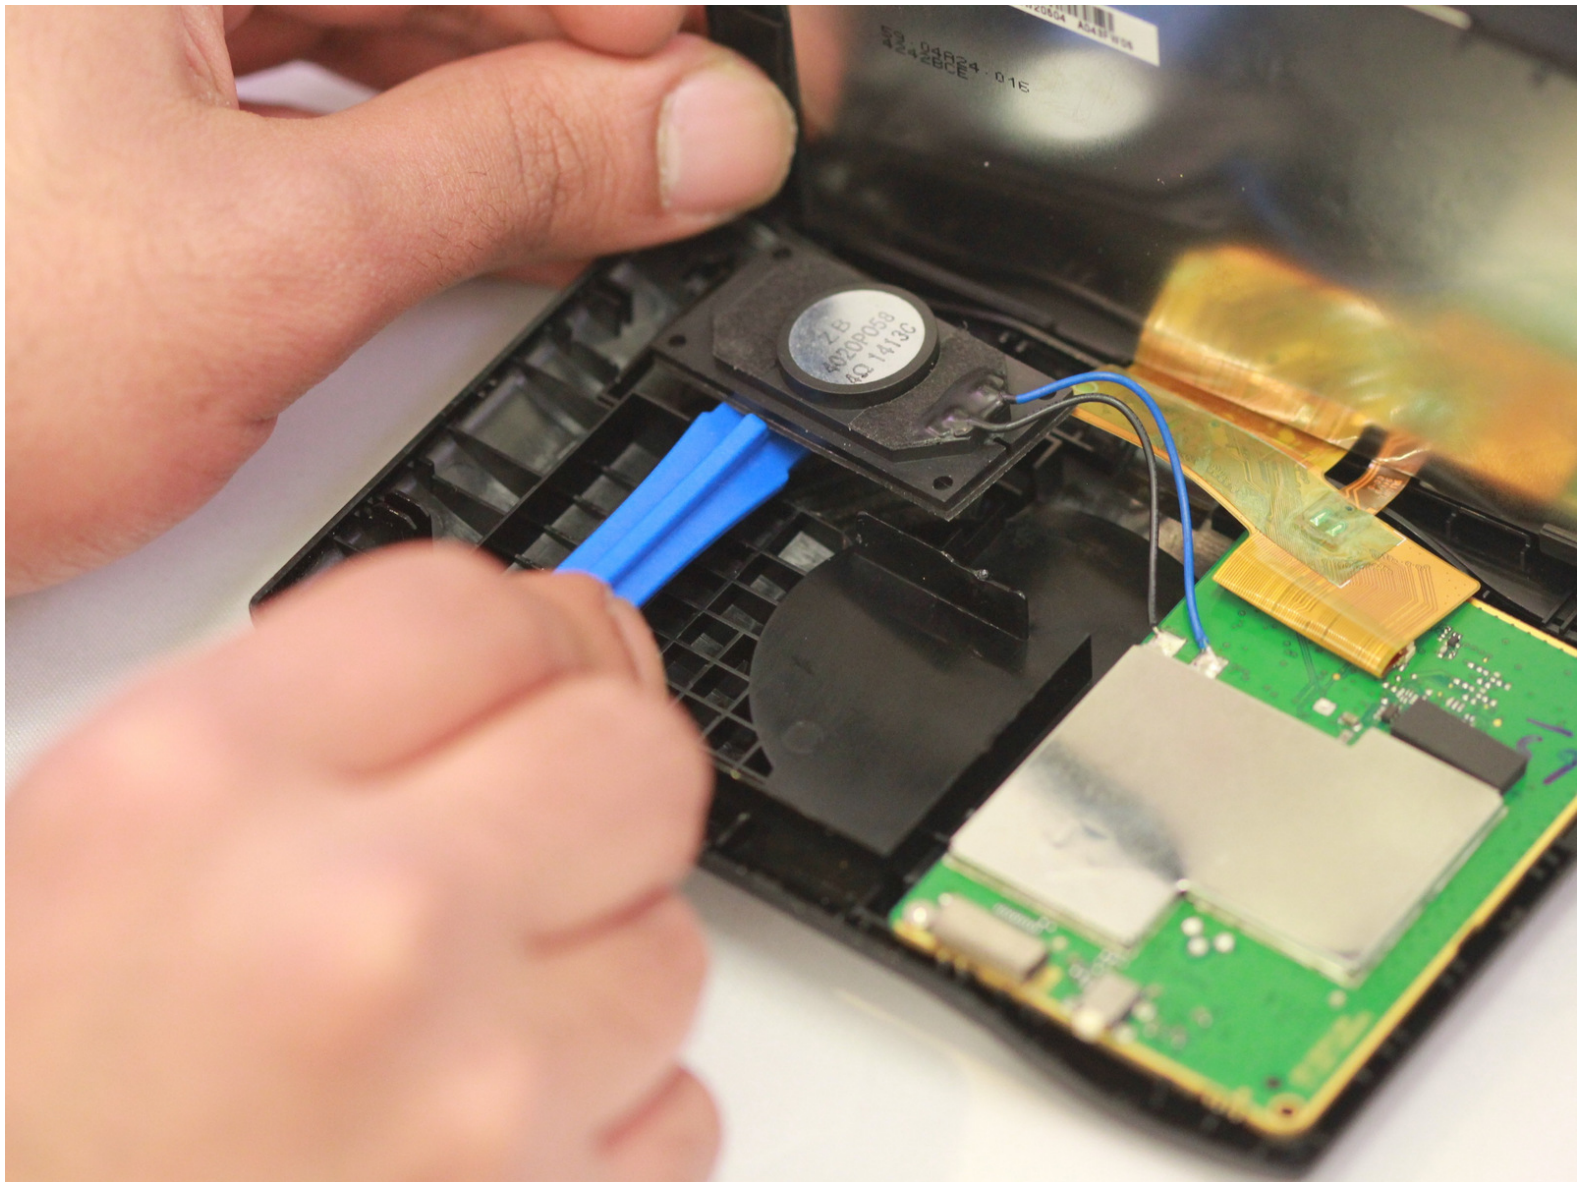

## INTRODUCTION

Before replacing the speaker, visit this device's [Troubleshooting Page](#) to determine whether you need to replace the speaker. Follow the steps in this guide if you need to replace the speaker.


---



### TOOLS:

- [T5 Torx Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
  - [Portable Soldering Iron](#) (1)
-

## Step 1 — Back Cover

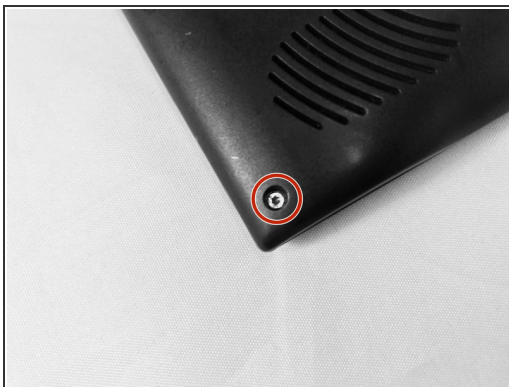

- Remove the four screws on the back of the GPS using the T5 Torx screwdriver.


## Step 2



- Pry the GPS open using a plastic opening tool.
- ⓘ When prying open the device, use caution to avoid damaging the motherboard.




## Step 3 — Speaker

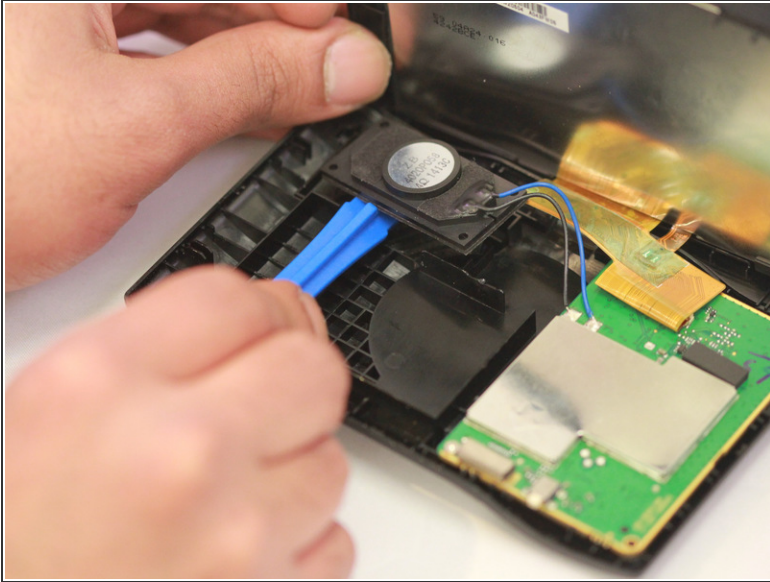

- Use the plastic opening tool to pry the speaker away from the device.

⚠ Be gentle, the speakers are connected to the motherboard by blue and black wire.

## Step 4

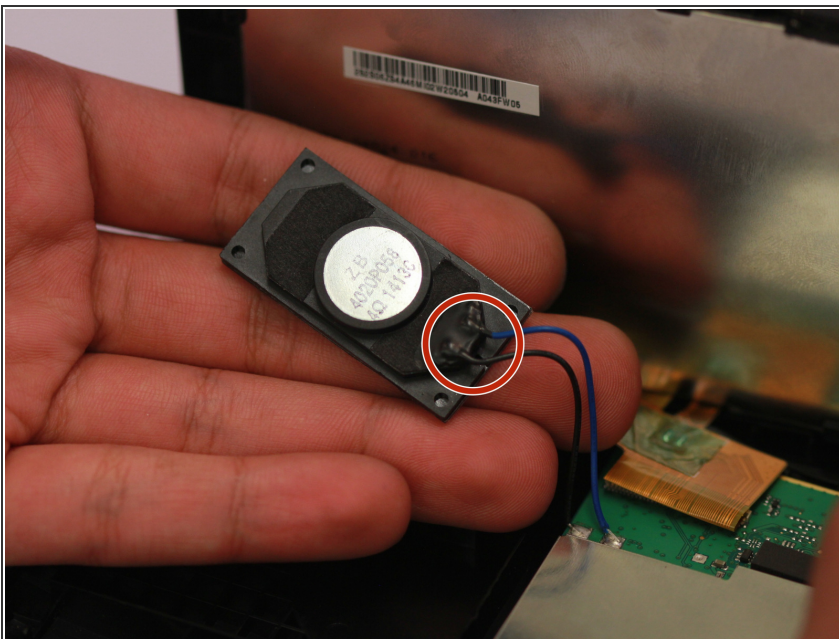

- Using a soldering iron, desolder the black and blue wires connected to the speaker.
- ⓘ Check out this awesome guide on [how to solder and desolder connections](#).

To reassemble your device, follow these instructions in reverse order.

